

b o r g o
healthcare



b o r g o



VITA
Healthcare Furniture

VITA by Borgo is a line of contemporary case goods designed to make the healthcare environment feel more like home. Vita finds itself fitting into every space from nursing homes to hospitals. The line is comprised of a variety of customized dressers, wardrobes, bookcases, entertainment units, desks and head and foot boards for beds. Accessories such as mirrors, corkboards, marker boards and castors can be added.

CUSTOMIZATION OF PRODUCT

Catering to your unique requirements, VITA can be custom built to suit your specific needs. For more information please contact Customer Services.




TEST OF TIME

Every piece of VITA furniture is built to withstand the test of time. All faces are constructed with 3/4" thick panels, to ensure rigidity and a meaningful product lifespan. All exposed laminate edges are covered with a 2.5 mm polymer edge banding in the same color as the laminate. This offers a higher level of durability and because of its rounded edges, there is less of a chance for bruising a patient or caregiver from an accidental bump. Bottom panels extend under the side and back panels of cabinets for greater strength.




EASY REPAIR

Because the panel design that comprises VITA, are not glued together, repairs, when needed are cheaper and any broken parts can simply be changed rather than replacing the entire unit.

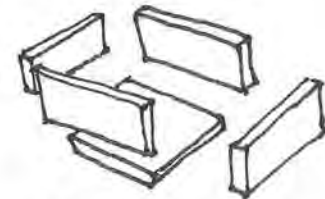


AIR CIRCULATION

Every drawer has a 1" diameter vent to facilitate air circulation. This is designed not to expose the particle board to possible moisture and bacteria which could gather in the core.

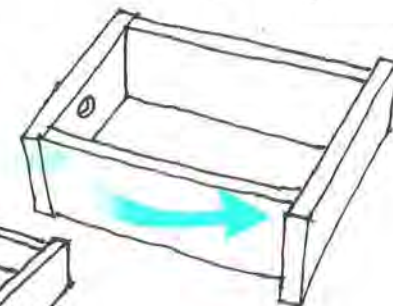


SEALED TIGHT

If an edge of a particle board is not covered entirely by the piece that it is joined to, then it is covered by an edge band making sure no particle board is exposed.

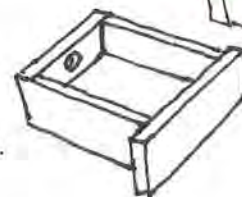

SOFT STOP


Drawers are designed to slide smoothly on white metal rails, which facilitate easy cleaning. At the end of these rails are bumpers which cushions the closing drawers when they reach the end of the line. Resulting in a soft, almost inaudible sound.

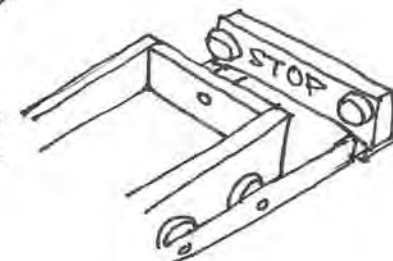

SURFACES


Tops are 3/4" thick and can be low pressure laminate with polymer edge banding, high pressure laminate with polymer edge banding, high pressure laminate with solid wood edges or seamless thermoformed vinyl.

Top surfaces can be, low pressure laminate with polymer edge or high pressure laminate with polymer edge. Thermoformed vinyl or high pressure laminate tops can come with wood edge. Tops come standard with a 1/4" edge on all 4 sides. A 1/2" overhang is available upon request. Tops on units over 40" high are low pressure laminate only.

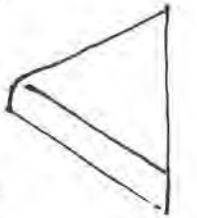

CABINET FACES

All VITA doors and drawer faces are 3/4" thick and comes in 2 styles. VITA offers a flat face or one with a recess detail. Low pressure laminate with polymer edge and thermoformed vinyl. Head boards and foot boards are high pressure laminate on 3/4" plywood with polymer edge banding. High pressure laminate and plywood are used in this application for added strength.

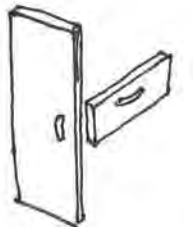

LEGS & BASE RAIL

Cabinets come with a 4 1/4" legs to allow for easy floor cleaning, or is available with a base plate that is in either low pressure laminate with polymer edges or seamless thermoformed vinyl to match the door/drawer face material.



BENCH

The cushions for the bench are 3" high density foam thick for more comfort. Available upholstered in healthcare grade vinyls and fabrics. Ask about fire rated and green foam options.



LAMINATE FINISHES

Laminates come in standard Borgo finishes.

VENEER

Many items in the VITA product line are also available in maple veneer and with a combination of veneer exterior surfaces and low-pressure laminate interior faces.

LOW PRESSURE LAMINATE - TECHNICAL SPECIFICATIONS

NEMA STANDARDS (LD 3-2005) 12/HGS

Wear resistance	Measure of the ability of a surface to keep its design or colour under abrasive wear	400 cycles
Appearance	Presence of visual defects on decorative surface	No surface defects
Scratch resistance	Measure of the resistance of the decorative surface to scratch by a diamond tipped tool	N/a
Stain Resistance	Measure of the resistance of the decorative surface to stains when exposed to 15 soiling agents	1 to 10 no effect 11 to 15 moderate
Cleanability	Measure of the ability of the decorative surface to be cleaned when exposed to 15 soiling agents	(difficult to see the stain)
Light resistance	Measure of the ability of the decorative surface to retain its colour when exposed to a light source close to sunlight	Slight
High Temperature resistance	Measure of the ability of a decorative surface to maintain its colour and aspect when exposed to high temperature	Slight
Radiant Heat resistance	Measure of the ability of a decorative surface to resist any damage when exposed to a radiant heat source	No effect after 60 seconds
Boiling water resistance	Measure of the ability of a decorative surface to resist any damage when exposed to boiling water for 20 minutes	No effect
Impact resistance	Measure of the maximum falling height of a steel ball that does not cause fracture to the decorative surface	381mm/n 15 in
Fire resistance	Measure of flame spread rating under controlled conditions	n/a
Warping	Measure of maximum departure of the surface from flatness	n/a

STAIN AGENTS TESTED ON SURFACES

1. Distilled water	As received	Apply 2 drops 6mm spot cover with watch glass
2. Ethyl Alcohol Solution	A solution of 50% ethyl alcohol and 50% distilled water as received	As above
3. Acetone	As received	As above
4. Household Ammonia	As received (non sudsing type)	As above
5. 10% citic acid	An solution of 10% citric acid in distilled water	As above
6. Vegetable oil	As received	As above
7. Fresh Coffee	1 teaspoon instant coffee per 180ml distilled water	As above
8. Fresh tea	Brew 1 tea bag per 120ml distilled boiling water for 2 minutes	As above
9. Ketchup	As received	As above
10. Yellow mustard	As received	As above
11. 10% Povidoe Iodine	As received	As above
12. Black Permanent MArker	As received	Mark spot (6mm spot) do not cover
13. # 2 Pencil	As received	As above
14. Wax Crayon	As received	As above
15 Black Paste Shoe Polish	As received	Apply (6mm spot) do not cover

HIGH PRESSURE LAMINATE - TECHNICAL SPECIFICATIONS

NEMA STANDARDS (LD 3-2005) 12/HGS

Appearance		3.1	No ABC defects
Light Resistance		3.3	Slight
Cleanability		3.4	20 (max)
Stain Resistance		3.4	No effect Moderate
Reagents 1- 10			
Reagents 11-15			
Boiling Water Resistance		3.5	Slight
High Temperature Resistance		3.6	Slight
Ball Impact Resistance	in mm	3.8	30 (min) 762 (min)
Radiant Heat Resistance	sec	3.10	100 (min)
Dimensional Change		3.11	
Machine direction			1.1 (max)
Cross Direction			1.4 (max)
Wear Resistance		Cycles	400 (min)

THERMOFORMED VINYL - TECHNICAL SPECIFICATIONS

NEMA STANDARDS (LD 3-2005) 12/HGS


3.4	Stain	Resistance to staining from a list of staining agents and solvents. (See products tested on previous page)	No effect 1-10 Moderate 11-15	No effect
3.4	Cleanability	Ease with which a surface can be cleaned after exposure to various staining agents	Rating of 20 or less	9-15
3.5	Boiling Water	Resistance to surface changes when exposed to boiling water	No effect	None
3.7	Scratch	Diamond scratch resistance	3 or better (horizontal)	3
3.8	Ball Impact	Resistance to fracturing from a steel ball dropped on laminated surface	500mm- 1250mm	2000 > 3000
3.9	Dart Impact	Resistance to fracturing from a 25g dsrt with a 5mm tip dropped on a laminated surface	200mm- 500mm	> 1100
3.13	Wear	Resistance to colour or print loss during prolonged abrasion cycles	400- 700 cycles	500 - 3200

Ordering Notes: Silver Metallic finishe matches VITA legs and stanchions

LAMINATE VINYL COLORS*



Amberwood



Royal Mahogany



1765 Finese



Cognac



1744 Inspiration



2145 Choco Cherry

T-MOLD BUMPER COLORS

Colors to match Vinyl Colors

* Please note the printed laminate and bumper colours may not be exact, please contact your Borgo sales representative for details.

VITA FEATURES

FULL CYCLE DESIGN

VITA was designed with the environment in mind. It uses a large amount of recycled content, that can contribute to both LEED credits 4.1 and 4.2. Our initiative to be environmentally friendly far exceeds the final product. Our packaging is also recyclable and made of post-consumer waste.

AMERIGREEN



At Borgo we are dedicated to sustainability. We understand that it is our obligation to take care of our planet. Over 90% of all our raw materials are obtained from suppliers based less than 25 miles from our Toronto plant. We have reduced our landfill waste by more than 70% and more than 95% of our waste is recycled and reused. In 50% of our products we use rapidly renewable materials or recycled products. In doing so we have received an AmeriGREEN certification (AGS-11209-BCS) that shows our commitment to not wasting our planets resources.

WARRANTY

All cabinets carry a limited lifetime warranty. Over bed tables have a 2 year warranty. For more information refer to our website. www.borgo.com

TOP EDGE PROFILES



Brock

Nevada

Jordan

Round

DOORS & DRAWER PULL STYLES



Half Moon

Slipper

Curve Tube

Straight Rod

SECURITY

VITA cabinets can have locks added to them to protect belongings. The lock option is factory installed and must be specified on the order.




LAMINATE DRAWER

A white low pressure laminate drawer with a single action 3/4" extension slide is an available option. All edges will be banded.



LEGS & CASTERS OPTIONS

VITA custom cabinets comes with several options for legs and casters. VITA can have a combination of legs, casters, locking casters, no legs no swivel casters. Please contact our customer service for more info.

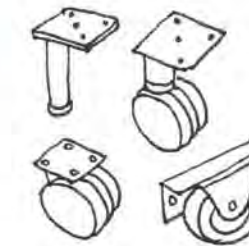

KEEPING IT LEVELED

Standard on units without legs, are adjustable glide which helps to ensure the furniture is steady and leveled on uneven floors.



SANITARY DRAWER LINER

VITA bedside tables are available with the option of a plastic drawer liner. This removable seamless drawer liner allows for sterilization and easy repair and replacement. Ideal for infection control.



WASTE BAG HOLDER

Waste bag holders can be mounted to the side of VITA products. This beautiful design can be field installed and holds small bags.



TOWEL RACK

An easy way to keep any space organized.




SPILL SAFE EDGE

Keeping a healthcare environment sanitary is one of the most important needs. The VITA spill safe edge stops liquids from spilling over the edge of our bedside tables. Available only on thermoformed vinyls table tops.



SOFT TOPS

Rounded corners on bedside tables help to reduce the risk of bumps and bruises on patients and caregivers when accidentally knocked against. This option is available on laminates & high pressure laminates.

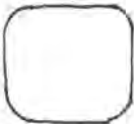

GALLERY RAILS

Rails can be added to three sides of tops to protect from objects falling off the edge.



PERSONALIZING CABINETS

Optional mirrors, marker boards and corkboards can be added to cabinets for patient and staff use.



SPACE ORGANIZING

VITA wardrobe offers a wide range of adjustable shelving and rod options.



TV STANDS

VITA offers a pull out swivel TV tray that can be installed into VITA cabinets. Must be factory installed.




TOP OVERHANG


To meet all of your needs, VITA can have 1/4" or 1/2" overhang. The 1/4" edge is ideal for small spaces, where as the 1/2" works well for moving furniture around.

MASTER KEY

VITA Bedside tables comes with the option to lock with a master key. This must be specified on the order.

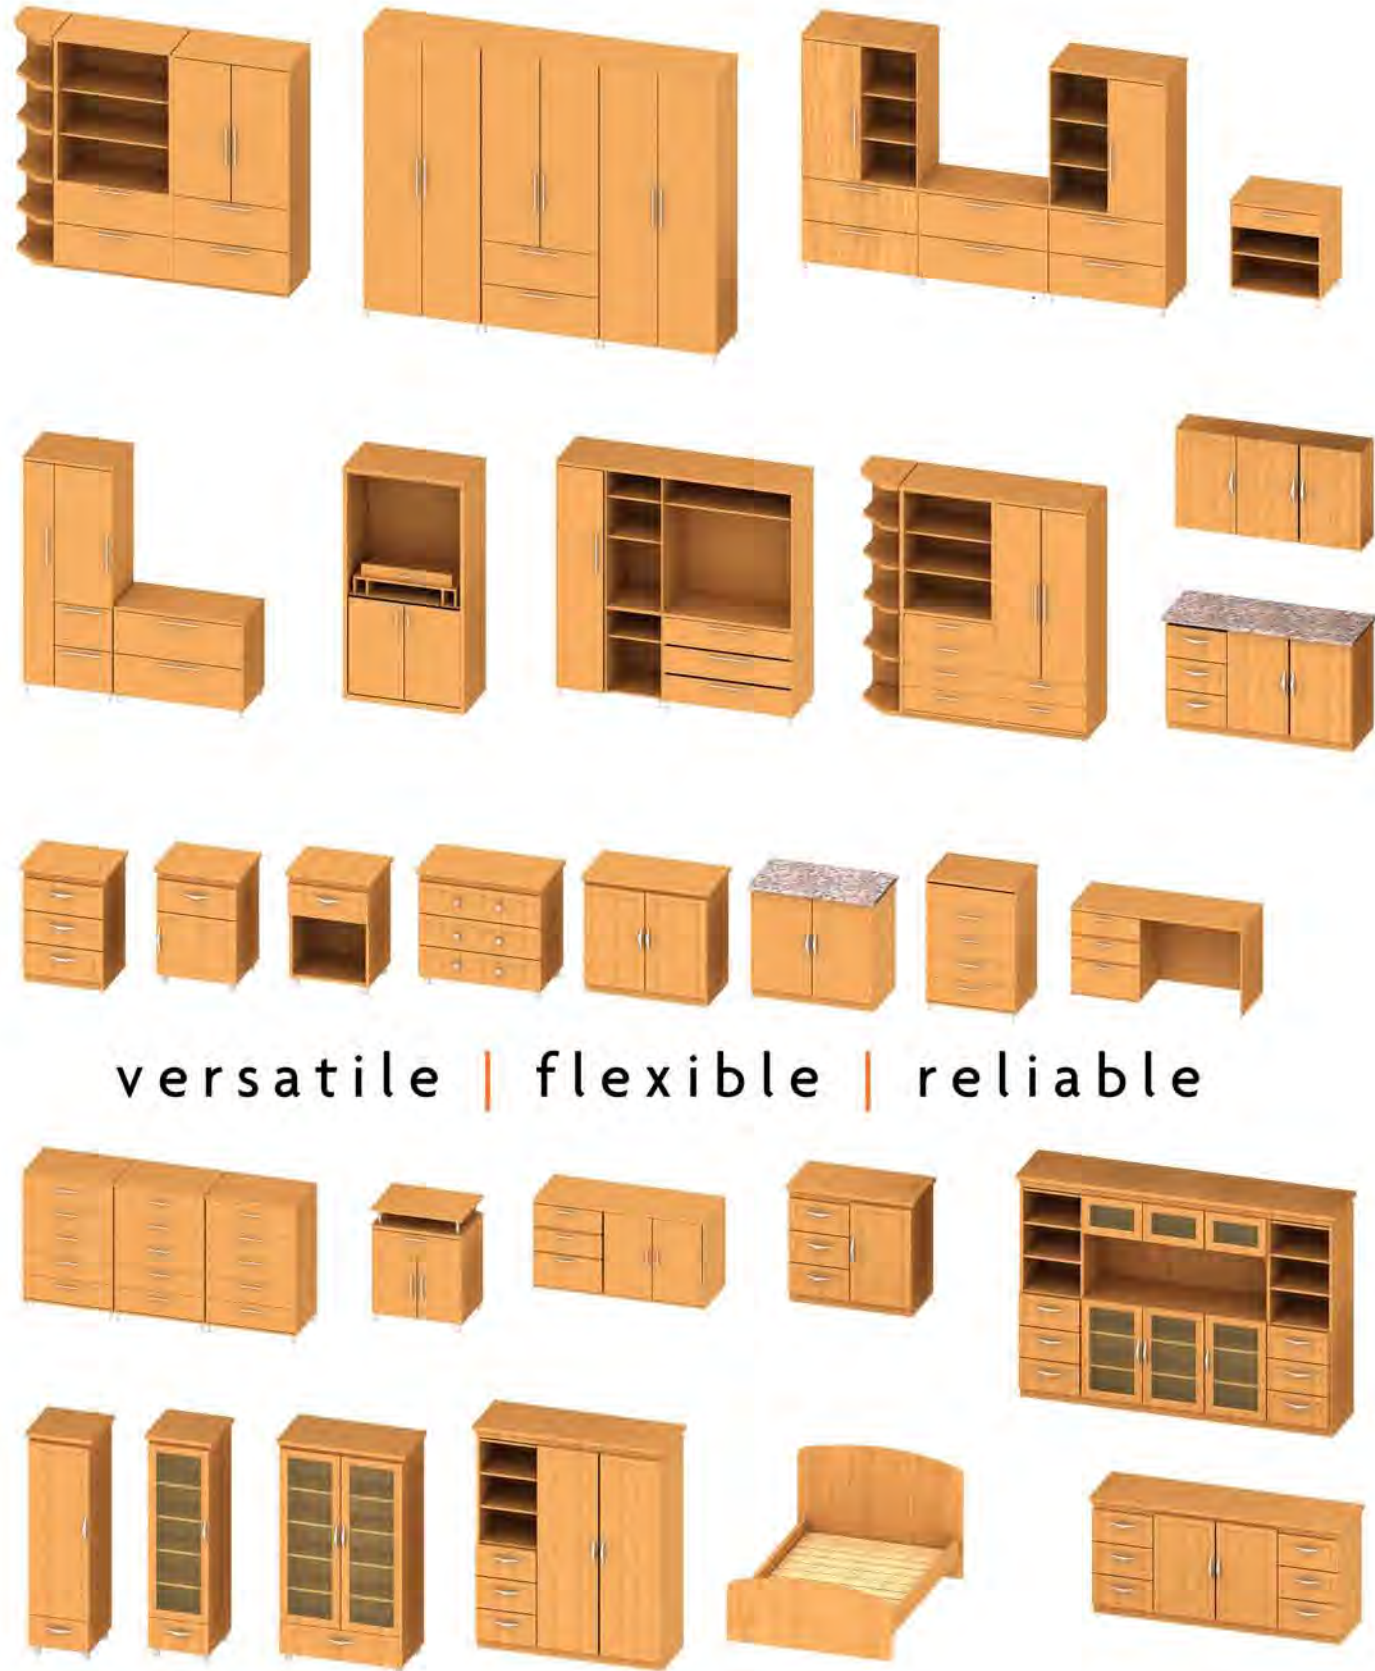

versatile | flexible | reliable

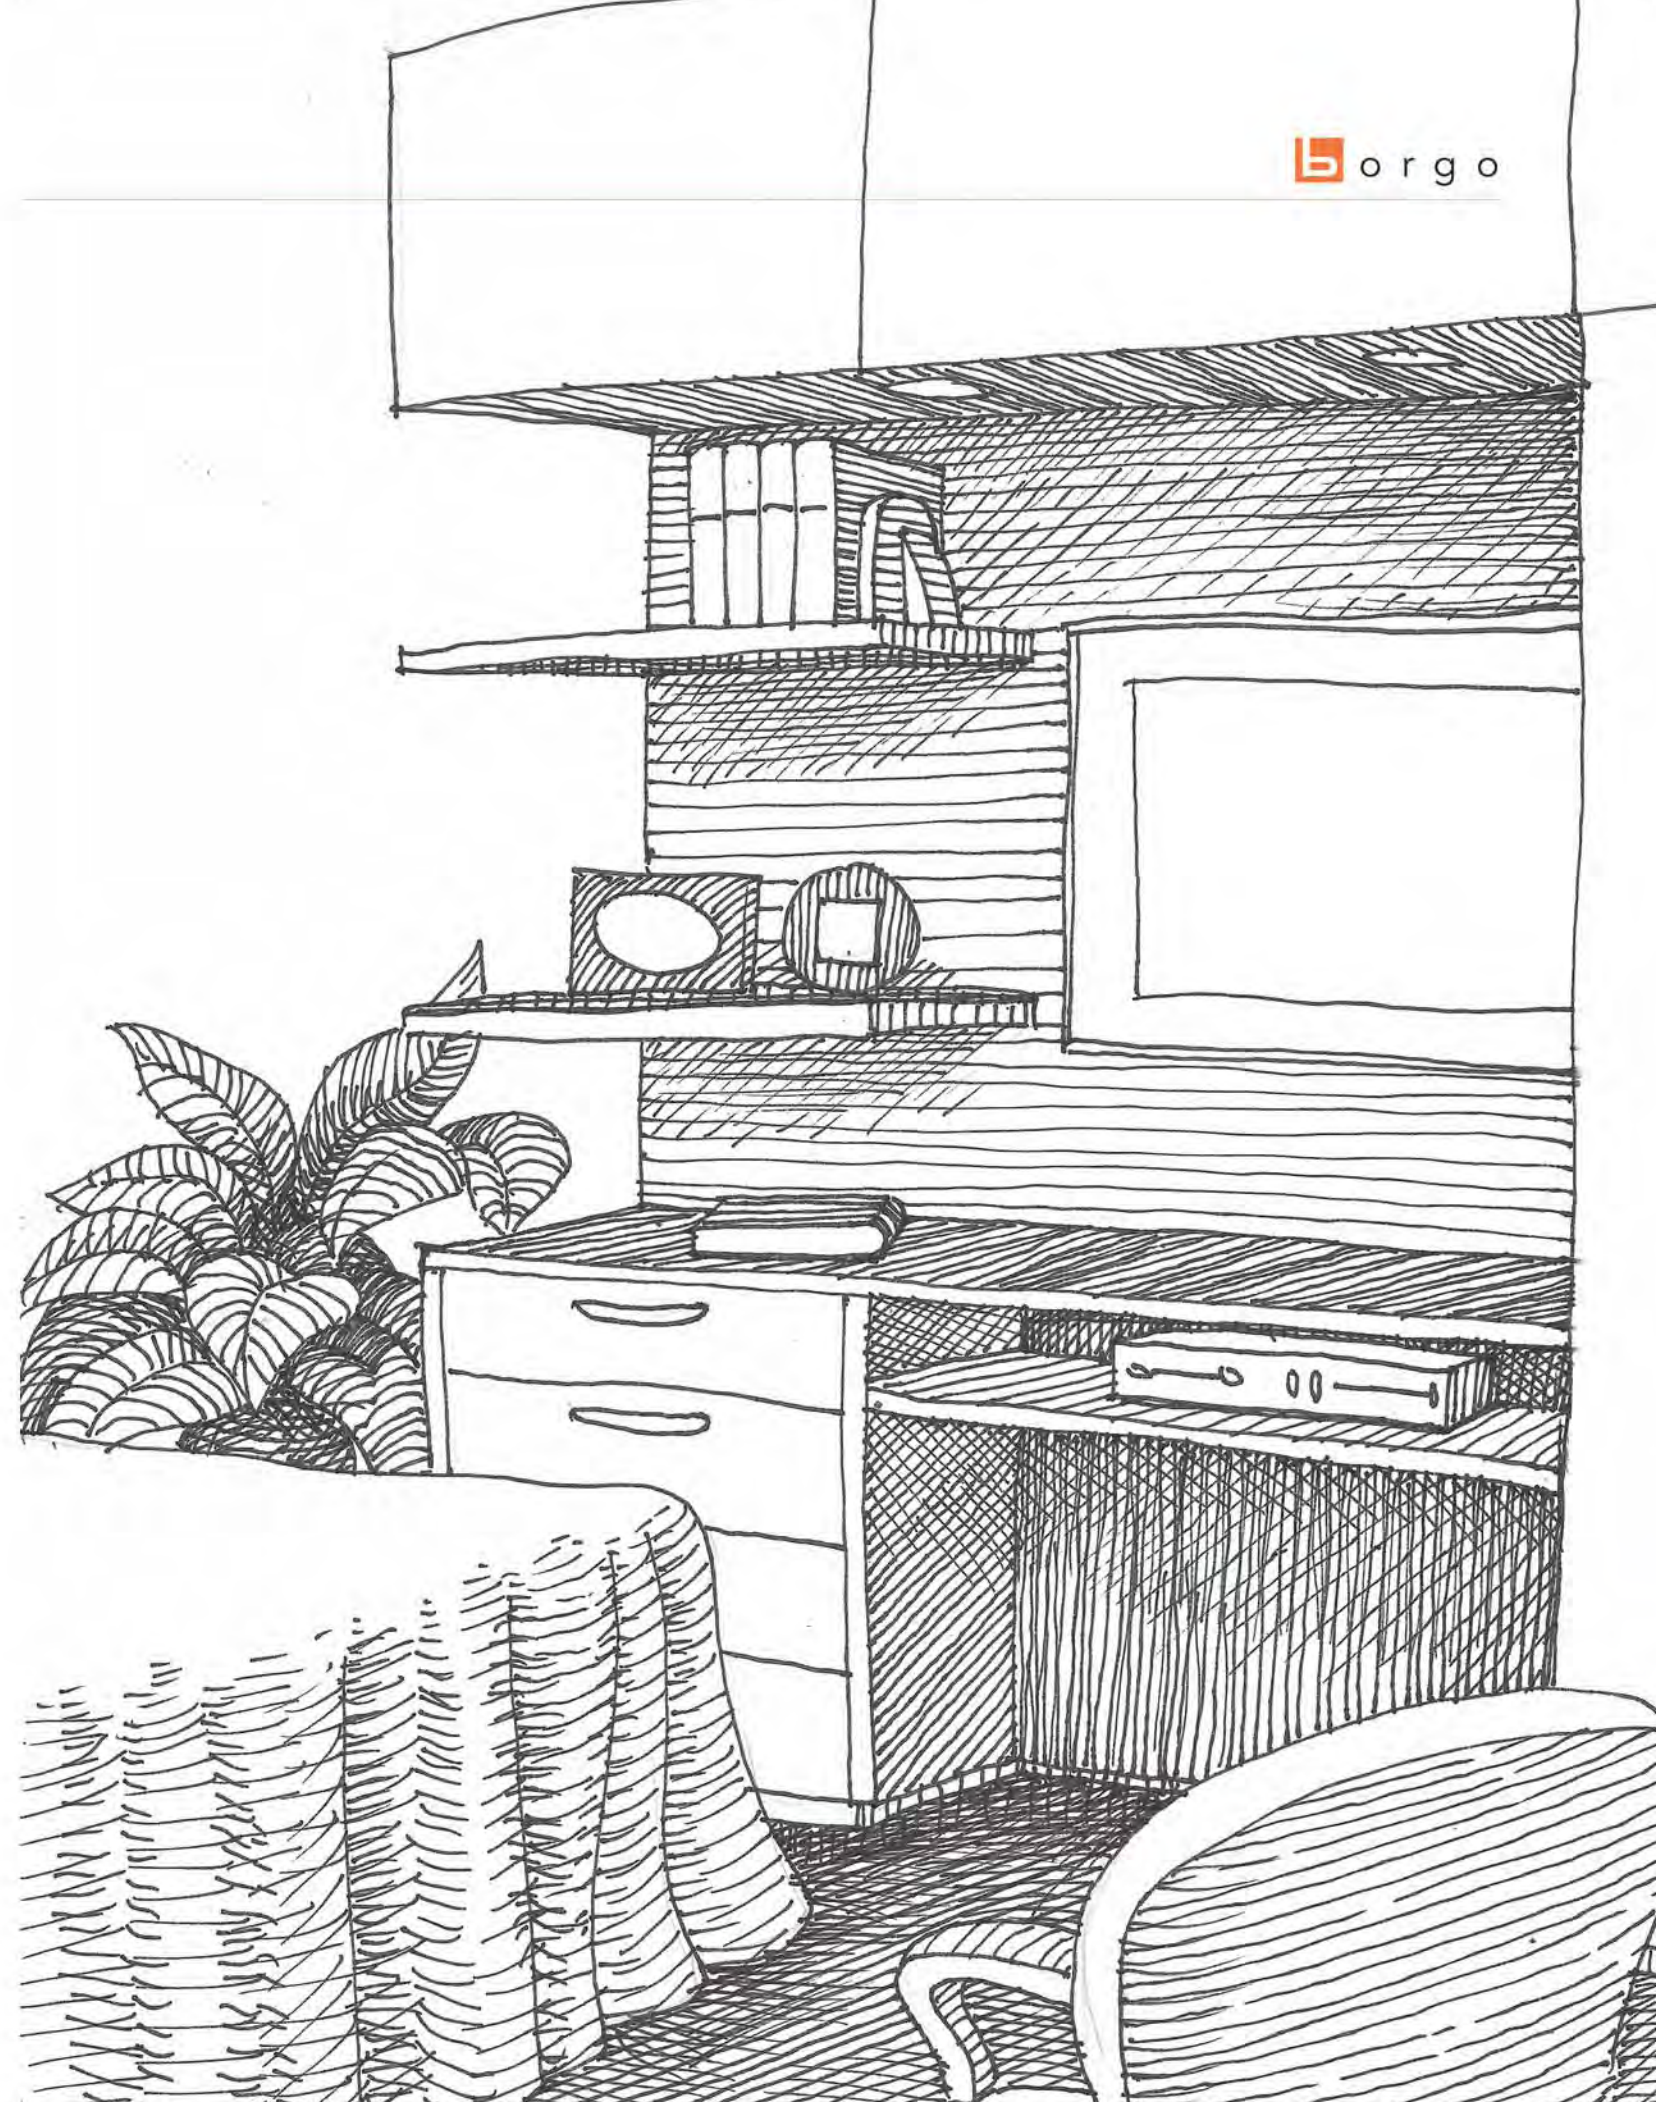

All of our seatings is available in healthcare grade vinyls and fabrics. Our polyurethane stools and task seating are all customizable with multiple pneumatic gas cylinder options, hard floor casters, carpet casters, glides and various optional adjustable and fixed armrests. Upon request we can provide fire-rated, and bio foam on selected lounge and task seating.

A proud manufacturer of Quality Furniture for the Healthcare Environment.

This catalogue is only a small sample of all the products we have in our line. We carry a full range of high performance executive and tasking seating. One of the largest soft seating lines, with the most unique styles that do not sacrifice comfort or functionality. Multi-purpose seating which can truly do anything, and some of the most versatile auditorium and theater seating around. Please see our price list for more options.



Spa Stool PG 123

Ideal for dentist offices. Its unique design allows the back rest to function as an arm rest and can rotate 360 degrees.

Functions:

- Seat height adjustments
- Back rest swivels 360
- Back rest also functions as an arm rest

Height: 27 - 32" (685 - 815 mm)
Width: 20" (510 mm)
Depth: 19" (485 mm)
Seat Height: 18 - 23" (460 - 585 mm)
Seat Width: 18" (460 mm)
Seat Depth: 18" (460 mm)
Arm Height: 27 - 32" (685 - 815 mm)



8062
Medical Stool
Pneumatic height adjustment with Polyurethane seat.
Features:
• 360 degree swivel
• Seat height adjustment
Height: 26.75" (680 mm)
Width: 13.5" (345 mm)
Depth: 13.5" (345 mm)



2958C2
Medical Chair
Polyurethane seat and back.
Features:
• Swivel
• Seat height adjustment
• Back height adjustment
• Back angle tilt
Height: 21 - 31" (535 mm - 790 mm)
Width: 14" (355 mm)
Depth: 18" (460 mm)



2955C8
Medical Chair
Polyurethane seat and back.
Features:
• Swivel
• Chair & back height
• Back angle tilt
Height: 48.75" (1240 mm)
Width: 18" (460 mm)
Depth: 18" (460 mm)



8064
Medical Stool
Pneumatic height adjustment Polyurethane seat.
Features:
• 360 degree swivel
• Seat height adjustment
Height: 48" (1220 mm)
Width: 18" (460 mm)
Depth: 18" (460 mm)



2957C2
Medical Chair
Polyurethane seat and back.
Features:
• 360 degree swivel
• Seat height adjustment
• Back height adjustment
• Back angle tilt
Height: 21 - 31" (535 - 790 mm)
Width: 14" (355 mm)
Depth: 18" (460 mm)



PG60
Medical Stool
Polyurethane seat and back.
Features:
• 360 degree swivel
• Seat height adjustment
• Back height adjustment
• Back angle tilt
Height: 38.5" (980 mm)
Width: 13" (330 mm)
Depth: 8.25" (210 mm)

SILVER AGE

SAA 08 + SAA 22

(Headrest)

Reclining armchair with foot rest and manual mechanism.

Height: 44.5" (1140 mm)
Width: 25" (630 mm)
Depth: 36.25" (920 mm)
Seat Height: 18" (460 mm)
Seat Width: 19.5" (500 mm)
Seat Depth: 21" (535 mm)
Arm Height: 26.5" (670 mm)

Silver Age Accessories



SAA 21
Tray



SAA 22
Headrest



SAA 23
Lumbar Support



SAA 24
Ottoman



SAA 25
Side Table



SAA 28
Basket



SAA 27
Caster



SAA 26
Casters



SAA 29
Back Pocket

o r g o

SA 03

Stacking dining chair

Height: 34.25" (870 mm)
Width: 22.5" (570 mm)
Depth: 23.25" (590 mm)
Seat Height: 19.25" (490 mm)
Seat Width: 19" (480 mm)
Seat Depth: 17" (430 mm)
Arm Height: 27.5" (700 mm)



SA 03A

Stacking dining chair with easy grip arms

Height: 34.25" (870 mm)
Width: 22.5" (570 mm)
Depth: 23.25" (590 mm)
Seat Height: 19.25" (490 mm)
Seat Width: 19" (480 mm)
Seat Depth: 17" (430 mm)
Arm Height: 27.5" (700 mm)



A contemporary solution for nursing homes.

SA 07 FIX+ SAA 21

High back fixed arm chair with dining tray.

Height: 44" (1120 mm)
Width: 24.5" (620 mm)
Depth: 28" (710 mm)
Seat Height: 18" (460 mm)
Seat Width: 20" (510 mm)
Seat Depth: 17" (430 mm)
Arm Height: 26.5" (670 mm)



SA 06 FIX

Armchair with low fixed back

Height: 37.5" (950 mm)
Width: 24.5" (620 mm)
Depth: 28" (710 mm)
Seat Height: 17.75" (450 mm)
Seat Width: 20" (510 mm)
Seat Depth: 17" (430 mm)
Arm Height: 26.5" (670 mm)



SA 06 FIX+

SAA 26 (Casters)

Arm chair with low fixed back

Height: 37.5" (950 mm)
Width: 24.5" (620 mm)
Depth: 28" (710 mm)
Seat Height: 19.25" (490 mm)
Seat Width: 20" (510 mm)
Seat Depth: 17" (430 mm)
Arm Height: 26.5" (670 mm)



The Silver Age healthcare furniture series features easy grip handles for standing up from a seated position. Fire-rated foam can be found throughout the line with elegant bent wood arms to make any place feel like home.

SILVER AGE



**Barbara
BARB**
Solid wood side chair.
Height: 33" (840 mm)
Width: 23" (585 mm)
Depth: 24" (610 mm)
Arm Height: 22.25" (565 mm)
Seat Height: 19.5" (495 mm)
Seat Width: 19" (480 mm)
Seat Depth: 16.5" (420 mm)



**Evangeline
3390**
Solid wood side chair,
with easy to grip arms
and clean out seat.
Height: 38.5" (980 mm)
Width: 24" (610 mm)
Depth: 19.5" (495 mm)



**Evita
100C**
The iconic wing back
chair has a cleanout
as well as a removeable
seat cushion option.
Height: 46" (1170 mm)
Width: 28.5" (725 mm)
Depth: 35" (890 mm)
Arm Height: 26" (650 mm)
Seat Height: 18.5" (470 mm)
Seat Width: 19" (485 mm)
Seat Depth: 18.5" (470 mm)



**Oxford
125C**
Perfect for nursing homes,
lobbies and waiting areas.
Height: 42" (1070 mm)
Width: 35" (890 mm)
Depth: 34" (865 mm)
Arm Height: 25" (635 mm)

function | comfort | flexibility



**Leo
3380**
Solid wood side chair,
with easy to grip arms.
Height: 35" (890 mm)
Width: 22.5" (570 mm)
Depth: 23" (585 mm)
Arm Height: 26" (660 mm)
Seat Height: 19" (480 mm)
Seat Width: 19" (480 mm)
Seat Depth: 16" (410 mm)



**Luna
892**
Side chair with cushion
bolster for extra support
and comfort.
Height: 34" (865 mm)
Width: 23" (585 mm)
Depth: 25" (635 mm)
Arm Height: 26.25" (670 mm)
Seat Height: 17" (430 mm)
Seat Width: 19.5" (495 mm)
Seat Depth: 19.5" (495 mm)



**Ascot
5110 Series**
Transitional elegance and comfort. Loveseat
and Sofa complete this small chair family.

Height: 33" (840 mm)
Width: 30" (760 mm)
Depth: 36" (915 mm)
Arm Height: 23.5" (595 mm)
Seat Height: 23.5" (595 mm)
Seat Width: 20" (510 mm)
Seat Depth: 21.5" (545 mm)



**Palio
7000 Series**
Sled base and 4 leg
version both **BIFMA
tested and approved.**
Height: 33" (840 mm)
Width: 23.5" (600 mm)
Depth: 24.5" (625 mm)
Arm Height: 25.5" (650 mm)
Seat Height: 18.25" (465 mm)
Seat Width: 19.75" (500 mm)
Seat Depth: 18.25" (465 mm)



**Staxis
600 Series**
BIFMA tested and approved
stacking chair, with and
without arms.
Height: 33.5" (850 mm)
Width: 22" (560 mm)
Depth: 19" (480 mm)
Arm Height: 21.5" (450 mm)
Seat Height: 15.5" (395 mm)
Seat Width: 18" (460 mm)
Seat Depth: 16.5" (420 mm)



**Life
LS 411**
A seating system that offers
limitless combinations, ideal
for waiting rooms, where
patient and parent can face
each other while seated.
Table tops come available in
High Pressure Laminate (HPL)
Height: 32" (810 mm)
Width: 30.5" (775 mm)
Depth: 30" (760 mm)
Arm Height: 23.5" (600 mm)
Seat Height: 16" (410 mm)
Seat Width Front: 24" (610 mm)
Seat Width Back: 18.5" (470 mm)
Seat Depth: 21" (530 mm)

Borgo offers a full range of high performance seating solutions.
Engineered to provide unsurpassed supportive comfort.



**Accademia Light
1571**

Features an optional polypropylene back panel. Internal ratchet back height adjustment and various arm options.
Height: 39" (990 mm)
Width: 19.5" (495 mm)
Depth: 21.5" (545 mm)
Seat Height: 16.5" (425 mm)
Seat Width: 19.5" (495 mm)
Seat Depth: 18" (460 mm)
Back Height: 18.5" (470 mm)



**Jendra
3614**

BIFMA Tested and approved. Molded foam seat and back with a fully upholstered back. Available with a high back, mid back and lab stool options.
Height: 39.5" (1000 mm)
Width: 20.5" (520 mm)
Depth: 27" (690 mm)
Seat Height: 18.75" (470 mm)
Seat Width: 20.5" (520 mm)
Seat Depth: 19.25" (490 mm)
Back Height: 19.5" (495 mm)



7233M
Mesh Back with adjustable arms



**Link
5513**
Executive nylon mesh back arm chair. With optional "micro-spring" seat for added comfort. Adjustable lumbar support.
Height: 47" (1190 mm)
Width: 26" (660 mm)
Depth: 24.5" (620 mm)
Seat Height: 16" (410 mm)
Seat Width: 19" (480 mm)
Seat Depth: 18" (460 mm)

adaptive | flexible | durable



**Zoe
BOR-201MB**
Fully upholstered molded contoured seat with mesh back. Adjustable lumbar support, and height & width adjustable armrests are standard.
Height: 42" (1070 mm)
Width: 25" (635 mm)
Depth: 26" (660mm)
Seat Height: 17" (430 mm)
Seat Width: 19.5" (500 mm)
Seat Depth: 19" (480 mm)
Arm Height: 25.5" (650 mm)
Back Height: 27.5" (700 mm)



**Pear
4703**
BIFMA Tested and approved. High back task chair, with multi-tilt mechanism, and molded seat and back cushions. With fire rated CAL117 foam.
Height: 38" (965 mm)
Width: 25" (635 mm)
Depth: 22.5" (570 mm)
Seat Height: 19.5" (495 mm)
Seat Width: 19.5" (495 mm)
Seat Depth: 19" (480 mm)



7233P
Polypropylene Back with adjustable arms



**Smart
2716**
Task chair with adjustable arms, polypropylene back and seat panel.
Height: 34-43" (900-1100 mm)
Width: 24.6" (620 mm)
Depth: 22.25" (570 mm)
Seat Height: 15.5-21.5" (410-540 mm)



**Bunter
2614**
24 Hour Heavy Duty Chair Fully upholstered outer back with lumbar support. **Tested and approved for use up to 350lbs.**
Height: 47.5" (1210 mm)
Width: 22" (535 mm)
Depth: 27" (690 mm)
Seat Height: 18" (460 mm)
Seat Width: 21" (560 mm)
Seat Depth: 21" (535 mm)
Back Height: 27" (685 mm)



**Ali
3301**
Plastic molded outer back, with lumbar support. Upholstered contoured back and seat. **BIFMA tested** and approved.
Height: 39" (990 mm)
Width: 26" (660 mm)
Depth: 24" (610 mm)
Seat Height: 19.5" (500 mm)
Seat Width: 18" (460 mm)
Seat Depth: 18.5" (470 mm)



7233U
Upholstered Back with adjustable arms

Anywhere & Everywhere Chair

Zero7, Link, & Accademia Light designs by Giovanni Baccolini





WAITING ROOM SEATING

designs by Giovanni Baccolini

Teorema & Tiffany

Elegant, functional, & flexible. They adapt to spaces with extreme harmony, creating situations that are always new, and always different.



Teorema 3501

Single Seat
Height: 31" (790 mm)
Width: 26" (660 mm)
Depth: 27" (690 mm)
Seat Height: 16.5" (420 mm)
Seat Width: 22" (560 mm)
Seat Depth: 18.5" (470 mm)

Teorema 3502

Two Seater
Height: 31" (790 mm)
Width: 26" (660 mm)
Depth: 27" (690 mm)
Seat Height: 16.5" (420 mm)
Seat Width: 44" (1120 mm)
Seat Depth: 18.5" (470 mm)

Teorema 3503


Three Seater
Height: 31" (790 mm)
Width: 26" (660 mm)
Depth: 27" (690 mm)
Seat Height: 16.5" (420 mm)
Seat Width: 66" (2680 mm)
Seat Depth: 18.5" (470 mm)

Teorema tables are available in tempered smoked glass and square edged laminate.



Tiffany 9201

Single Seat
Height: 31" (790 mm)
Width: 26" (660 mm)
Depth: 27" (690 mm)
Arm Height: 24" (600 mm)
Seat Height: 16.5" (420 mm)
Seat Width: 22" (560 mm)
Seat Depth: 18.5" (470 mm)

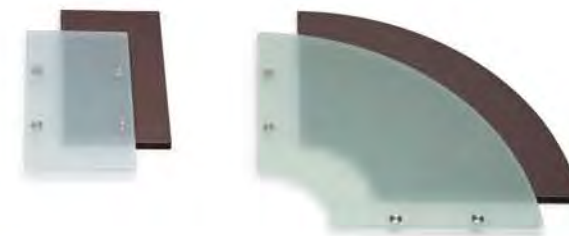

comfort | flexible
functional



Notte

SLEP1 + SLEP2

The Borgo Notte pull-out-bed mechanism provides comfort for patients, visitors and staff. Its features an easy to open and close chair to bed action, while maintaining safety. Large locking casters make it easy to move around a space.

Notte SLEP1

Chair Pull Out Bed
Height: 37" (940 mm)
Width: 31" (790 mm)
Depth: 36" (915 mm)
Arm Height: 26" (2160 mm)
Seat Height: 16" (410 mm)
Seat Width: 24" (610 mm)
Seat Depth: 21" (535 mm)
Opened Length: 85" (2160 mm)

Notte SLEP2

Loveseat Pull Out Bed
Height: 37" (940 mm)
Width: 54" (1370 mm)
Depth: 36" (915 mm)
Arm Height: 26" (2160 mm)
Seat Height: 16" (410 mm)
Seat Width: 47" (1195 mm)
Seat Depth: 21" (535 mm)
Opened Length: 85" (2160 mm)



STAGE 1



STAGE 2



STAGE 3



STAGE 4



STAGE 5



Examination Treatment Table

We are using our knowledge of designing quality, durable office furniture, to create a functional treatment table with back tilting adjustability
Height: 30" (760 mm)
Width: 30" (760 mm)
Depth: 72" (1830 mm)

PATIENT CARE



**Era
230**

A self-leveling frame is always stable. Comfortable and light weight design available in upholstered or with polypropylene seat & back for easy cleaning. Stacks 5 chairs high with and without arms.

Height: 31.5" (800 mm)
Width: 24" (610 mm)
Depth: 22.25" (565 mm)
Seat Height: 18" (460 mm)
Seat Width: 24" (610 mm)
Seat Depth: 21.5" (545 mm)
Arm Height: 26" (660 mm)



**Omnia Contract
4200**

Omnia Contract seats and backs are available upholstered in healthcare grade vinyls, using fire retardant padding and coverings with a shock-proof, scratch-proof shell. Stacking chair, with ganging capabilities, and optional arm and tablet.

Height: 32" (815 mm)
Width: 27" (690 mm)
Depth: 22.75" (580 mm)
Arm Height: 27" (690 mm)
Seat Height: 18.5" (470 mm)
Seat Width: 22" (570 mm)
Seat Depth: 17.25" (440 mm)



**Omnia Contract Beam
4262**

Flip-up seat design is a great spacesaver in hallways. Optional arm-mounted writing tablets. Beam and single four point to the floor designs. With or without arms.

Overall Height: 31.5" (800 mm)
Centre to Centre: 20" (510 mm)
Overall Depth: 21.5" (550 mm)
Overall Depth Closed: 23" (310 mm)
Seat Height: 17" (430 mm)
Arm Height: 25.5" (650 mm)



**Ingrid
580 Series**

With or without arms, stacks. Available fully upholstered, and in high-pressure laminate. A beautiful solution for cafeterias.

Height: 33" (840 mm)
Width: 16" (500 mm)
Depth: 20" (510 mm)
Seat Height: 18" (460 mm)
Seat Width: 16" (500 mm)
Seat Depth: 17" (430 mm)



**Eura
1205**

Fully upholstered, beech plywood and polypropylene back options. Top of arms are made of "soft-touch" elastomer.

Height: 33" (840 mm)
Width: 22.5" (570 mm)
Depth: 23.25" (590 mm)
Seat Height: 18.5" (470 mm)
Seat Width: 21" (535 mm)
Seat Depth: 17.5" (445 mm)
Arm Height: 26.25" (660 mm)



**Teknica
8100 Series**

Featuring superior strength, stacking options, & right side mounted writing tablet options. With flip-up or fixed seat, also available on a beam. Teknica features both upholstered and polypropylene seat and back options.

Height: 30" (770 mm)
Width: 22" (570 mm)
Depth: 20.75" (530 mm)
Seat Height: 17.7" (450 mm)
Seat Width: 16.75" (425 mm)
Seat Depth: 16.75" (425 mm)
Arm Height: 27" (690 mm)



Since 1984, Borgo has been producing quality seating for the architectural, design, healthcare and hospitality markets. Borgo seating can be found in the finest furniture showrooms, nursing homes, hospitals, universities, restaurants, and offices. Our furniture is exceptional, our quality is superior, and our reputation will confirm our commitment to overall excellence. We are committed to providing contract seating & furniture with quality and value that will last a lifetime.

For information on options and pricing please contact our friendly Borgo sales representatives or visit www.borgo.com



324 Carlingview Drive, Toronto, Ontario, Canada M9W 5G5
Tel: 416-679-8133 Toll Free: 1-888-31BORG Fax: 416-679-139
www.borgo.com sales@borgo.com

CERTIFIED QUALITY
ISO 9001:2000
MANAGEMENT SYSTEM

