



borgo®

Excellence in fixed seating and more

TEKNICA / TEKNICA BEAM





TECHNICALLY PERFECT

Disciplined, elegant, full of surprises. Teknica is a seating range for public spaces that satisfies each and every need. Teknica is connectable, stackable, mixable, with upholstered, or polypropylene seat and back. Teknica can hold an anti-panic table or a basket. And much more!

Teknica

FEATURES

- Teknica's multi-purpose design that takes a functional 4 legged chair and transfers seamlessly to beam seating.
- Featuring superior strength, stacking options, and right side mounted writing tablets.
- Seat and back are made of reinforced nylon with 25% fiberglass, and padded with CFC free high density foam.
- Upholstered seat and back are made of reinforced nylon with 25% fiberglass, and padded with CFC free high-density, high-resilency polyurethane foam.
- Frame is made from elliptical tubular steel with a black epoxy powder coated, embossed finish on the frame.
- Ganging capabilities are designed into every chair, with a built-in rugged ganging connectors.
- Modular design allows for arms to be added after market simply with an Allen key, which allows for the use in different settings such as a meeting room or concert hall.
- Arms are black tubular steel with polypropylene arm caps.
- All models are available with a tip-up and Anti-Panic writing table, this safety features also allows chairs to be stacked.
- Seat comes both fixed, and as an automatic returning flip-up seat.
- The seat with the automatic returning flip-up seat uses a spring, make it extremely functional, as it allows the use of a larger number of seats without the need to fix seating to the floor.
- Fixed seat model is able to stack 7 chairs high, while the flip-up seat model is capable of nesting.

OPTIONS

- Nylon seat and back are available in four colors: Black, Red, Turquoise and Blue.
- Anti-Panic, Anti-Scratch, black high pressure laminate (HPL) writing tablet for both left and right handed users.
- Under seat basket for books (TK41).
- Dolly for stacking fixed seated chair vertically (TK42).
- Row number tag per chair (TK43).



8101 Fixed Seat
8201 Flip-Up Seat
Armless
U - Upholstered, P - Polymer



8102 Fixed Seat
8202 Flip-Up Seat
Arms
U - Upholstered, P - Polymer



8103 Fixed Seat
8203 Flip-Up Seat
Arm with Writing Tablet
U - Upholstered, P - Polymer



8105 Fixed Seat
8205 Flip-Up Seat
Single Arm
U - Upholstered, P - Polymer

Max Height:	30.25"	770 mm	30.25"	770 mm	30.25"	770 mm	30.25"	770 mm
Max Width:	22.5"	570 mm	26.75"	680 mm	24.5"	620 mm	24.5"	620 mm
Max Depth:	20.75"	530 mm	20.75"	530 mm	20.75"	530 mm	20.75"	530 mm
Arm Height:	-	-	27"	685 mm	27"	685 mm	27"	685 mm
Back Height:	15"	380 mm	15"	380 mm	15"	380 mm	15"	380 mm
Seat Height:	17.75"	450 mm	17.75"	450 mm	17.75"	450 mm	17.75"	450 mm
Seat Width:	16.75"	425 mm	16.75"	425 mm	16.75"	425 mm	16.75"	425 mm
Seat Depth:	16.75"	425 mm	16.75"	425 mm	16.75"	425 mm	16.75"	425 mm
Wt/Chair:	16 lbs.	7 kg	20 lbs.	9 kg	18 lbs.	8 kg	18 lbs.	8 kg
Volume:	16 ft ³	0.45 m ³	16 ft ³	0.45 m ³	16 ft ³	0.45 m ³	16 ft ³	0.45 m ³
COM Fabric:	1 yd	0.92 m	1 yd	0.92 m	1 yd	0.92 m	1 yd	0.92 m
Per Carton:	3		3		3		3	



MEMORY SEAT

Automatically returning seat, uses coil spring for a quick, smooth return.

TRUE ANTI-PANIC TABLETS

Tablets effortlessly fold away in case of emergencies where immediate access is required.

DESIGNED FOR YOU

Each Teknica Beam installation is built specially for you, allowing for the system to accommodate flat, sloped and tiered floors.

QUICKER INSTALL TIMES

The number of fixing points is notably reduced with Teknica Beam, and in no way compromises its performance and robust construction.

ERGONOMIC SUPPORT

Double contoured back, and waterfall front edge seat allows for correct body posture when in the seated position.

LIMITLESS UPHOLSTERY OPTIONS

Looking for a more traditional comfort, the Teknica Beam is available padded and fully upholstered, upholstered seat only, or in nylon reinforced with fibreglass.

BUILT TO LAST

All metal parts are finished with black epoxy powder coating and small metal components are protected by black galvanizing process

POWERING YOUR LEARNING EXPERIENCE

Teknica Beam can be retrofitted to house power and data.

FUNCTIONAL ACCESSORIES

Book baskets are available vertically under the beam seating.


STYLE



UPHOLSTERY

Available in standard Borgo graded fabrics, leathers and vinyls as well as COM & COL.

POLYMER

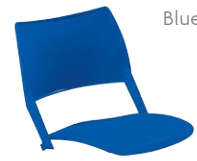

ARM



SEAT






OPTIONS




- FRAME:** Black (standard) Gray Custom colour (Min. 300 pcs)
- FIXED BEAM:** Floor Mounted Riser Mounted
- MOVABLE BEAM:** 1 Seat 2 Seat 3 Seat 4 Seat
- ACCESSORIES:** Book Basket






DIMENSIONS: TEKNICA BEAM

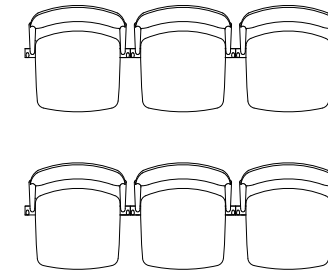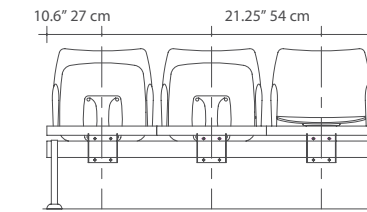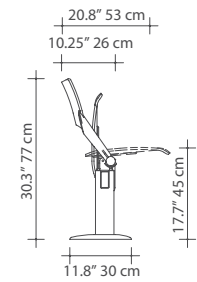

FLIP-UP SEAT ARMLESS

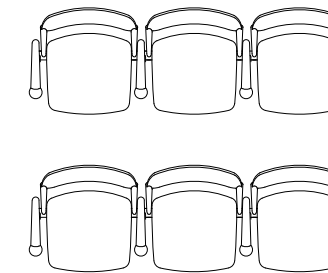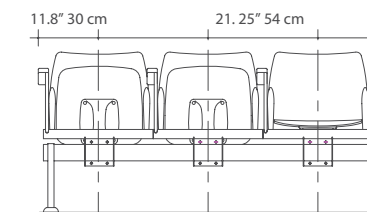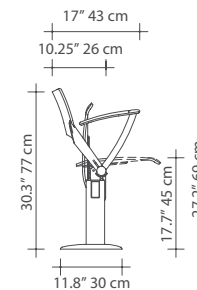

FLIP-UP SEAT WITH ARMS

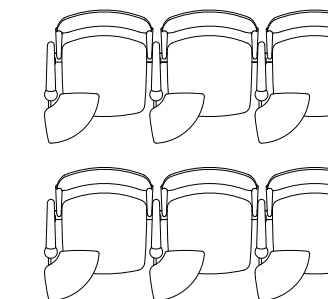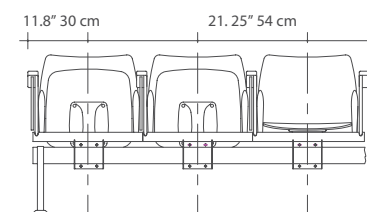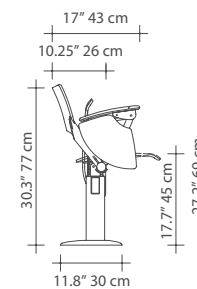

FLIP-UP SEAT ANTI-PANIC TABLET ARM



borgo.com

